

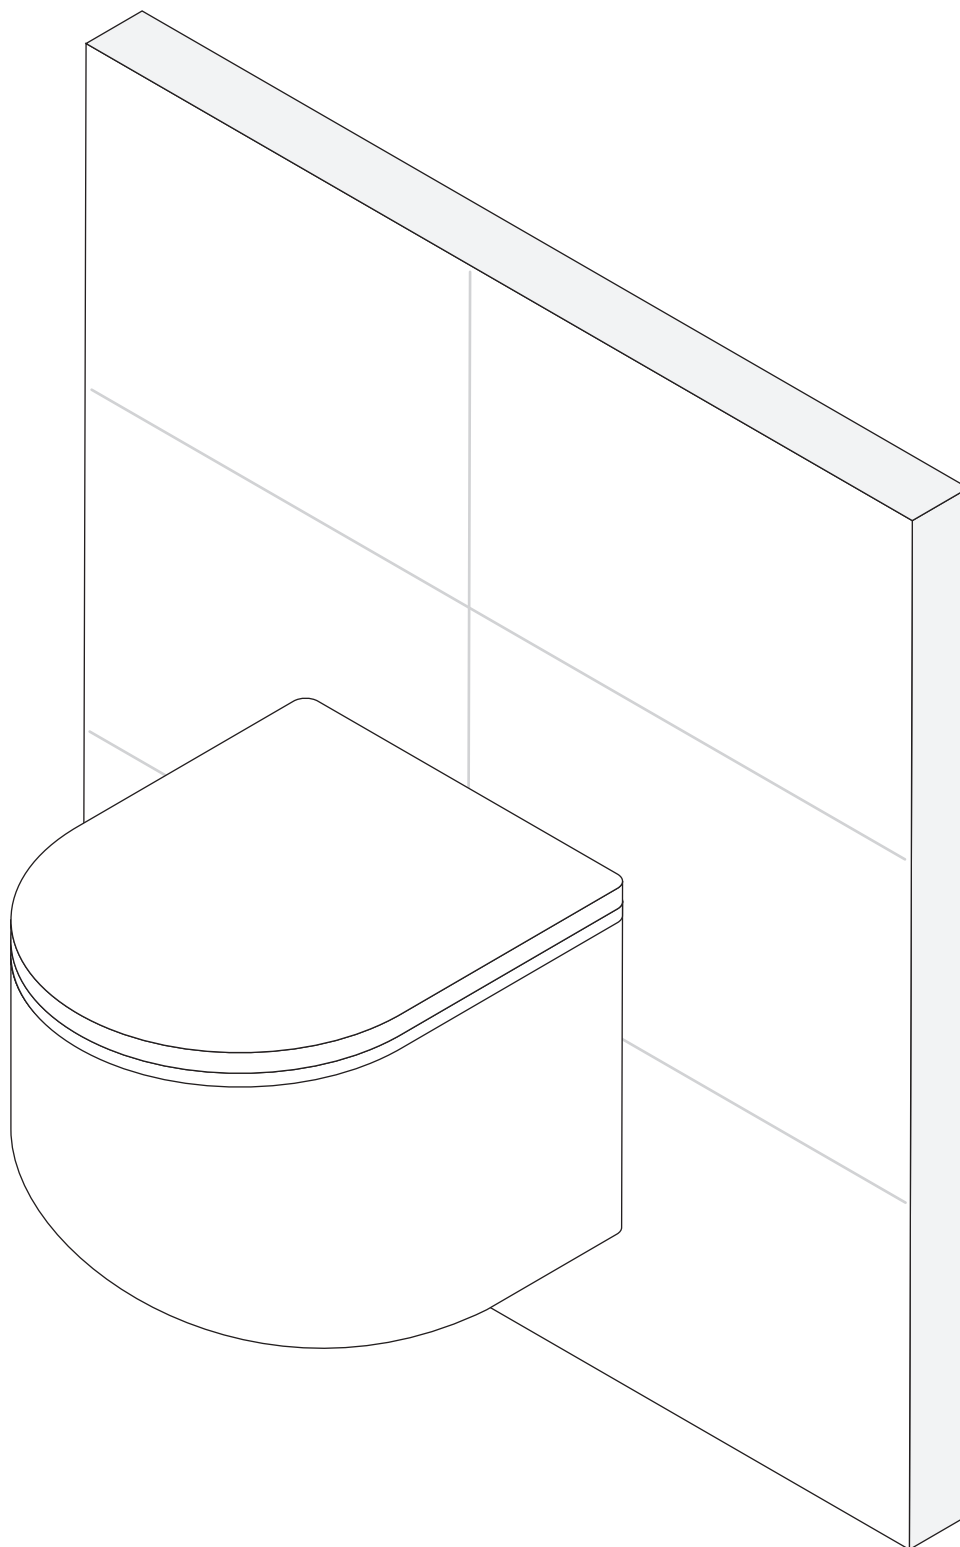





TOILET

WAND-HÄNGE WC | WALL-HUNG TOILET
INODORO SUSPENDIDO | TOILETTE SUSPENDUE | SANITA SOSPENSA

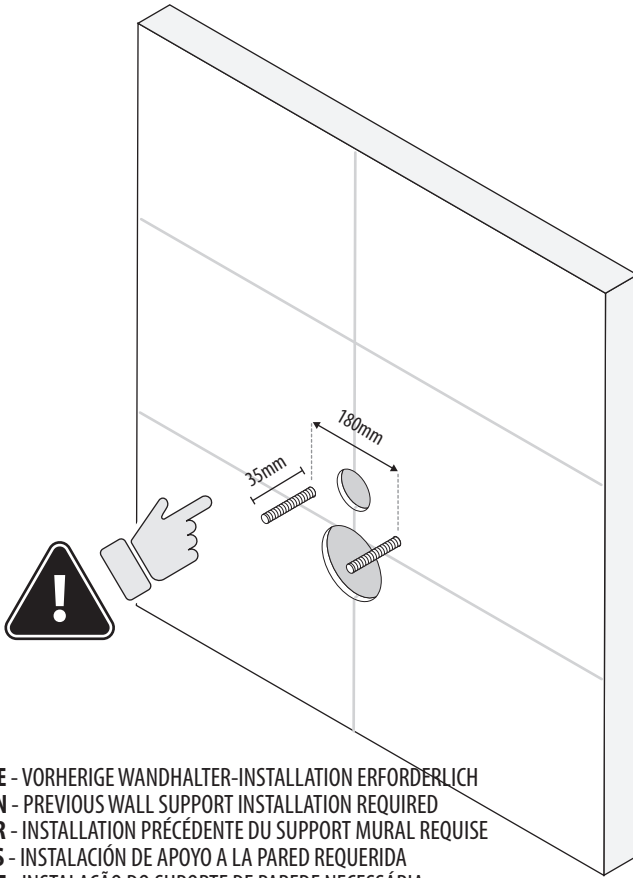


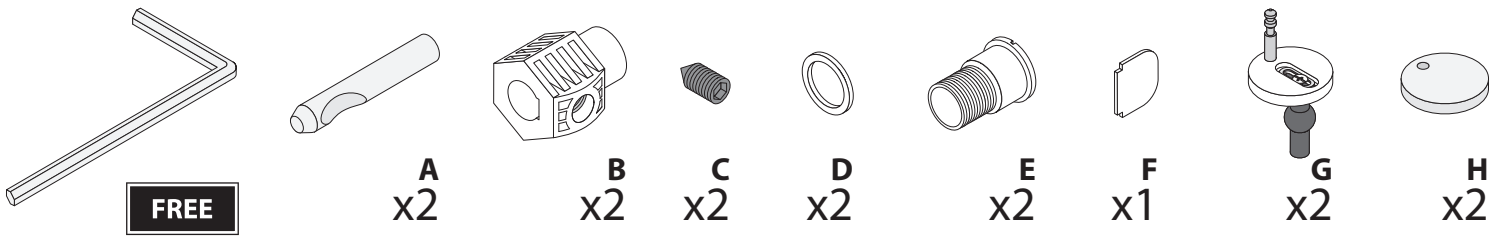


DE - VORHERIGE WANDHALTER-INSTALLATION ERFORDERLICH
EN - PREVIOUS WALL SUPPORT INSTALLATION REQUIRED
FR - INSTALLATION PRÉCÉDENTE DU SUPPORT MURAL REQUISE
ES - INSTALACIÓN DE APOYO A LA PARED REQUERIDA
PT - INSTALAÇÃO DO SUPORTE DE PAREDE NECESSÁRIA

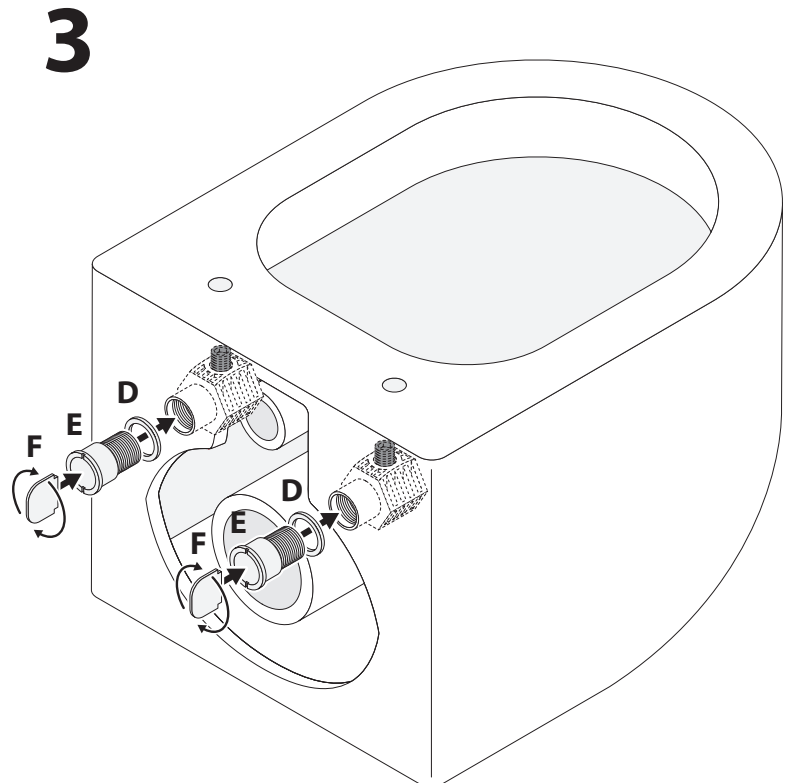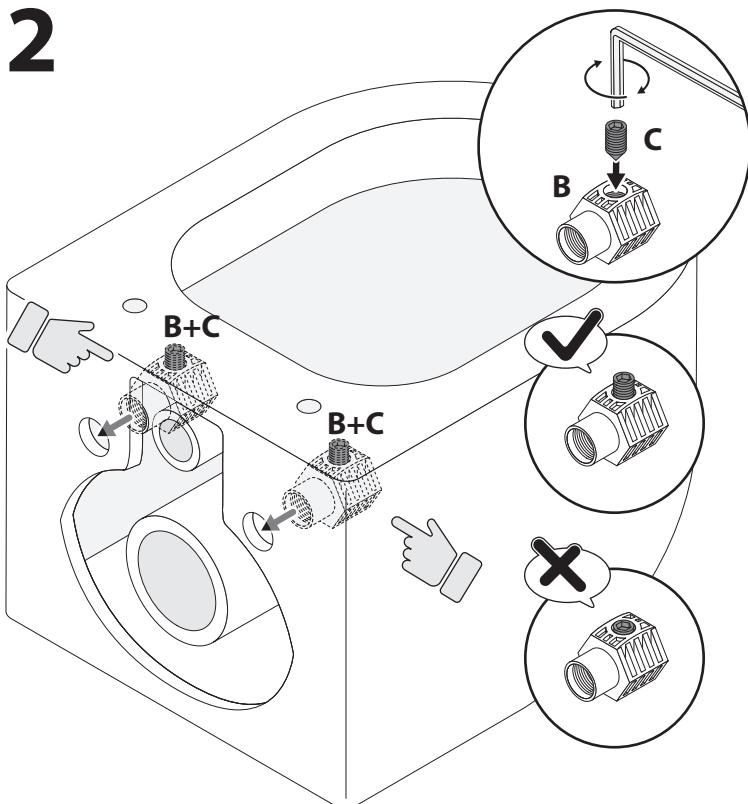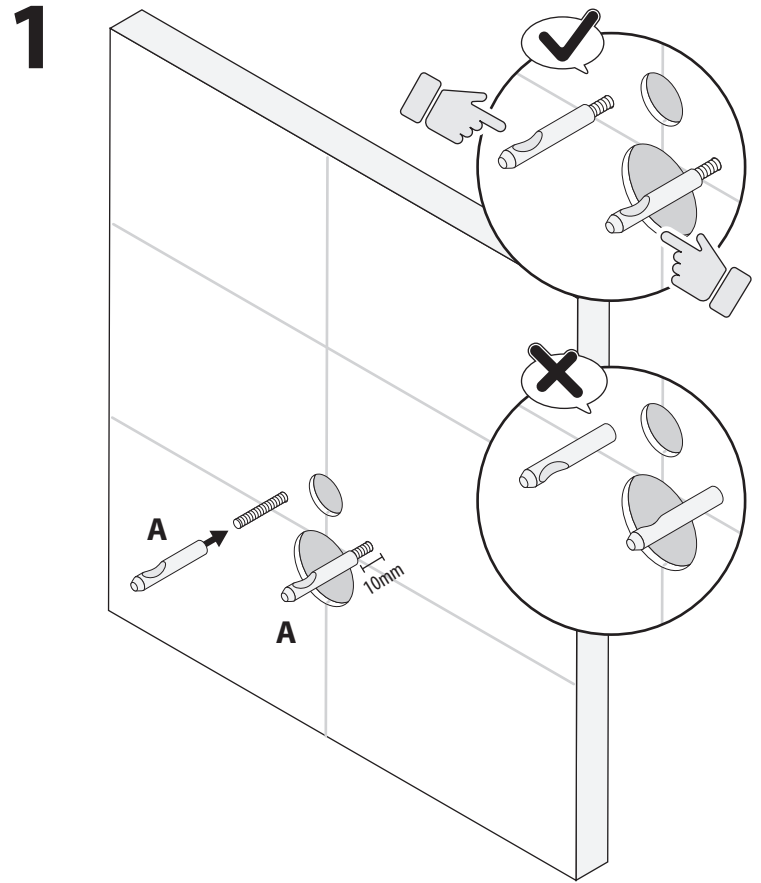


4





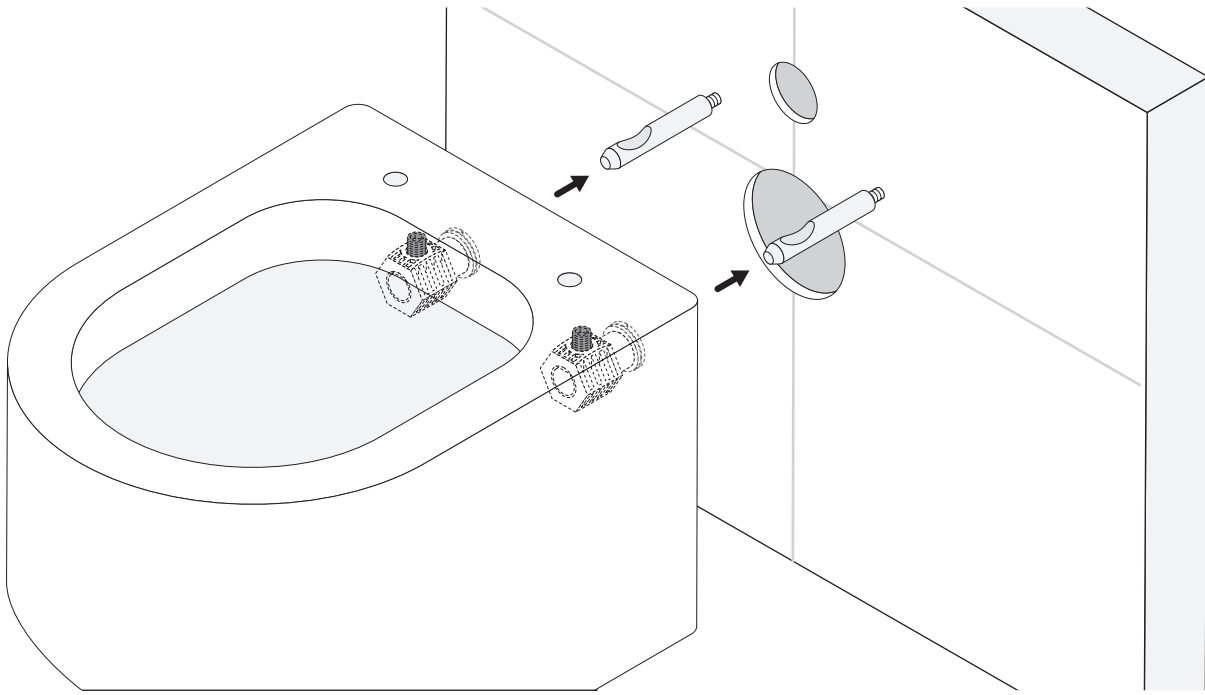


5

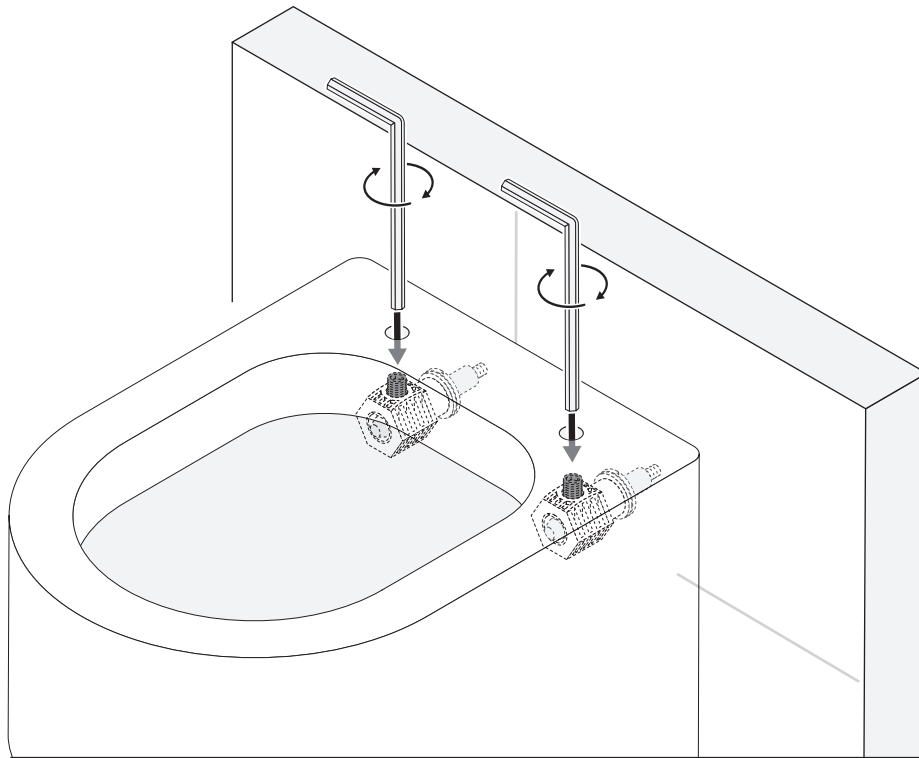

6

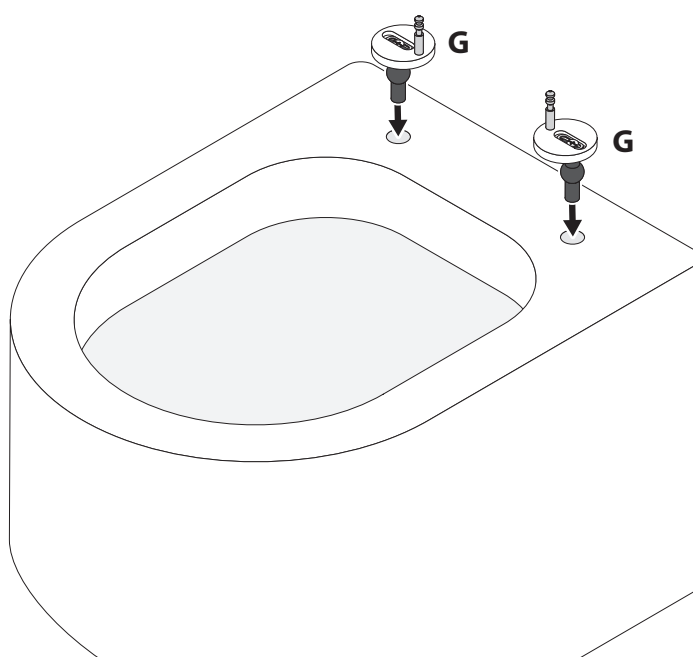

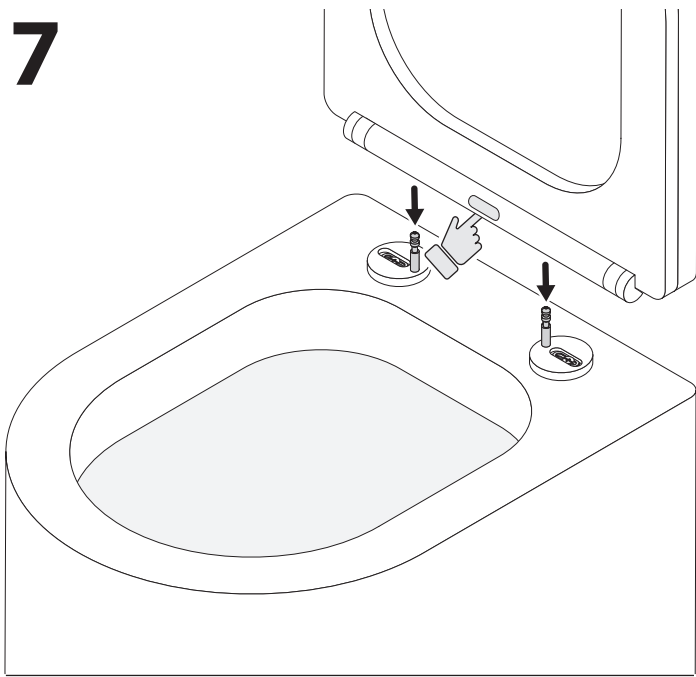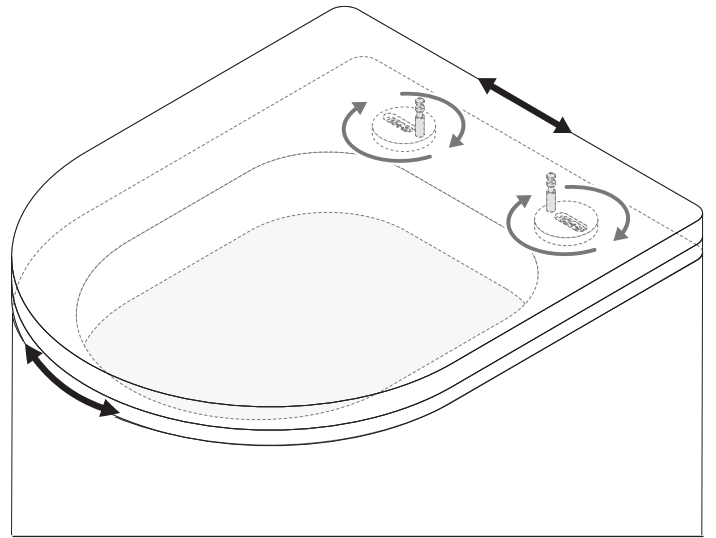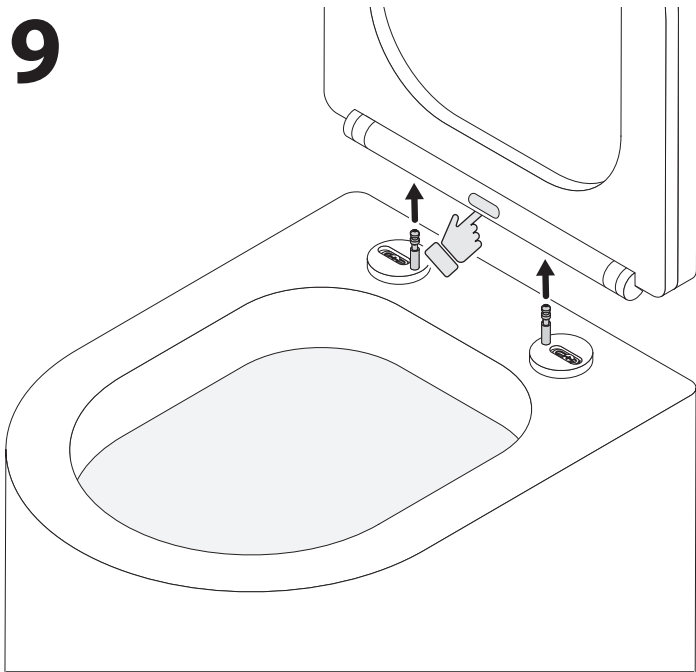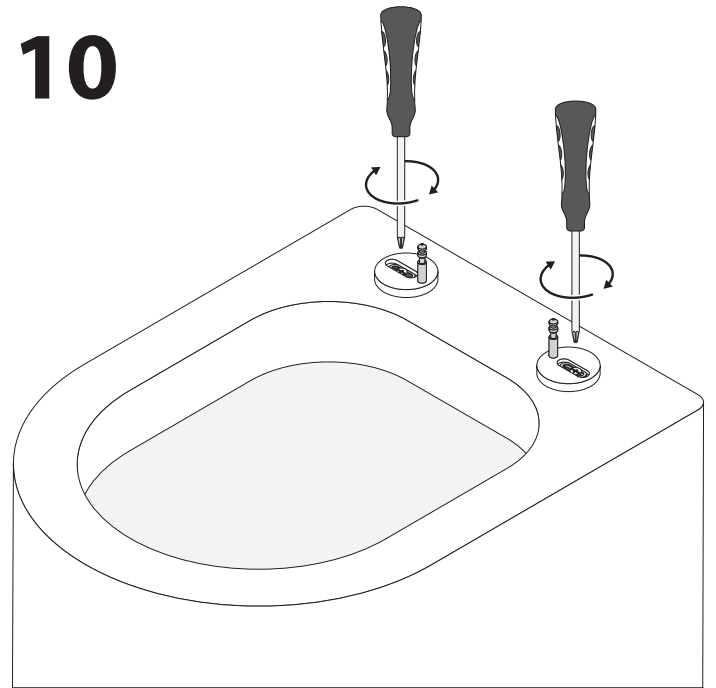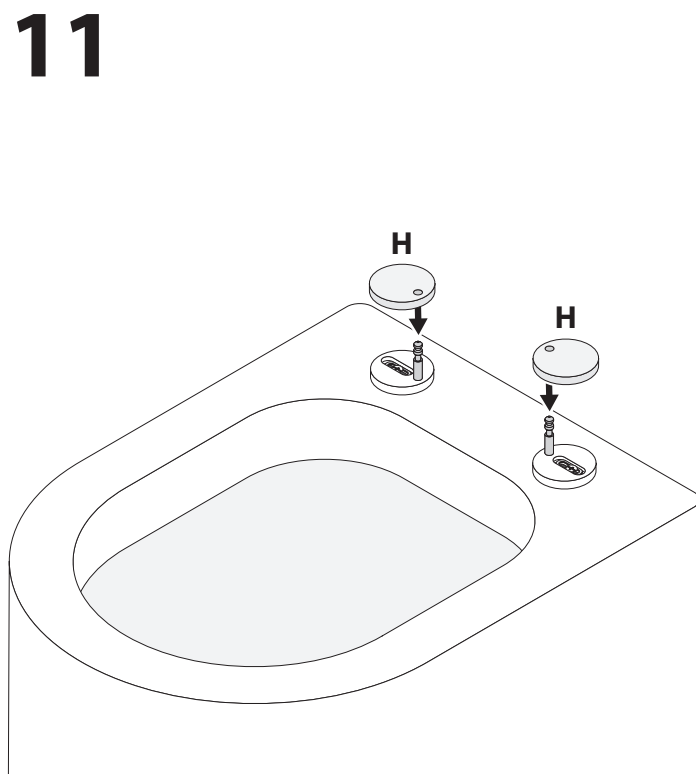7**8****9****10****11****12**